# SM315 | Mini Windshield Suction Swivel Mount with Universal Cradle

GN014-SBH
Windshield Mount
with Swivel Ball
Head Assembly

Patent Pending

SM015-2
Universal
Phone Cradle

AP013
Adhesive Disc

**Package Contents:**
(1) (1) GN014-SBH - Mini windshield swivel mount
(1) SM015-2 - Universal phone cradle
(1) AP013 - Optional adhesive circular disc for dash / console
(1) Alcohol cleaning pad

⚠ Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.

## Windshield Mounting

Step 1. Find a safe location on the interior of the vehicle's windshield to mount the pedestal. Firmly push the suction base **(A)** against the windshield and flip the base lever down **(B)** to the locked position. See diagram below.

Step 2. Adjust the angle of the pedestal arm by tightening the angle adjustment knob **(C)** at the base to the desired angle.

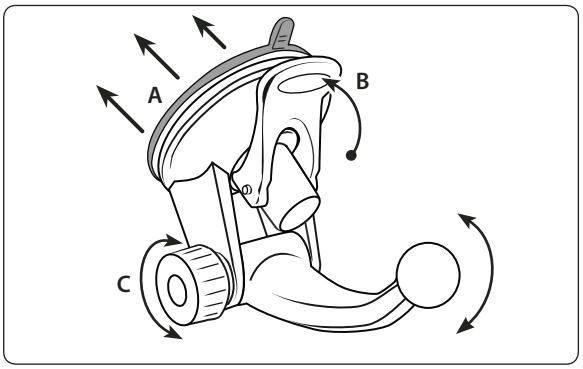


## Swivel Ball Head Assembly Attachment

Step 1. Slip the tightening ring **(D)** over the pedestal ball. Snap the dual-T head adapter plate **(E)** on to the pedestal ball **(F)**. Screw the tightening ring over the adapter plate until securely holding the plate. Adjust the angle as needed.

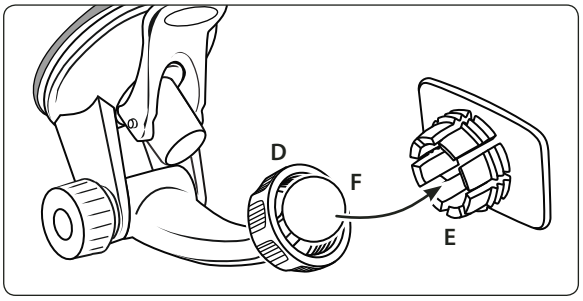


## Dash or Console Mounting (Optional)

Step 1. Find a safe location on the dash or console. Use the included alcohol pad to clean the mounting surface if necessary. Remove the paper backing on the adhesive disc and firmly press in place.

Step 2. Place the pedestal's suction base **(A)** over the center of the circular disc. While firmly holding the pedestal on top of the disc, flip the base lever down **(B)** to the locked position.

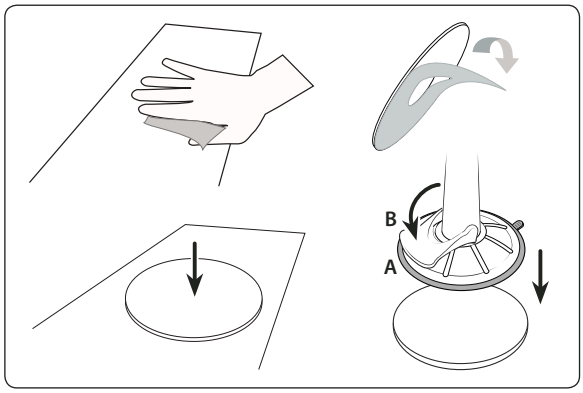


## Attach Cradle to Pedestal and Device Insertion

Step 1. Attach the cradle to the dual T-head by inserting the dual T-tabs **(G)** into the dual T-slots **(H)** on the back of the cradle.

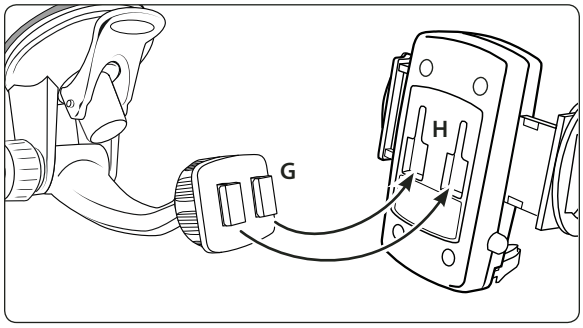


*...continued on other side*

⚠ **Safety Precautions**
Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON RESOURCES INC. *The Mobile Mounting Specialists™*

Consumer Hotline:
**USA** (800) 841-0884
**INT'L** (626) 254-9005
Monday - Friday 9 am - 5 pm, PST

**www.arkon.com**
Arcadia, CA 91006 USA
Designed in USA | Made in Taiwan
© Copyright 2009 Arkon Resources, Inc.

*...continued from previous side*

Step 2. Place the phone or device into the cradle with the device sitting on the adjustable support legs **(I)**. Clamp the grip arms **(J)** inward to firmly grasp the device. Press the release button **(K)** to open the arms.

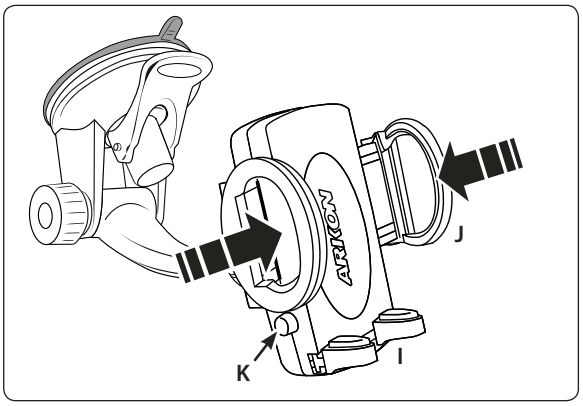


**Safety Precautions**

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON RESOURCES INC. *The Mobile Mounting Specialists™*

Consumer Hotline:
**USA** (800) 841-0884
**INT'L** (626) 254-9005
Monday - Friday 9 am - 5 pm, PST

**www.arkon.com**
Arcadia, CA 91006 USA
Designed in USA | Made in Taiwan
© Copyright 2009 Arkon Resources, Inc.